




User reference guide

# Daikin room air conditioner



Download the  
ONECTA app

 **STAND BY ME**  
Discover our service offer

ATXF25G5V1B  
ATXF35G5V1B

# Table of contents

|          |  |           |
|----------|--|-----------|
| <b>1</b> | <b>About the documentation</b>   | <b>4</b>  |
| 1.1      | About this document.....   | 4         |
| 1.2      | Meaning of warnings and symbols .....                                  | 4         |
| <b>2</b> | <b>User safety instructions</b>  | <b>6</b>  |
| 2.1      | General .....  | 6         |
| 2.2      | Instructions for safe operation .....                                  | 7         |
| <b>3</b> | <b>About the system</b>  | <b>11</b> |
| 3.1      | Indoor unit.....   | 11        |
| 3.1.1    | Indoor unit display.....   | 12        |
| 3.2      | About the user interface .....   | 12        |
| 3.2.1    | Components: Wireless remote control.....                               | 13        |
| 3.2.2    | Status: Wireless remote control LCD .....                              | 13        |
| 3.2.3    | To operate the wireless remote control .....                           | 14        |
| <b>4</b> | <b>Before operation</b>  | <b>15</b> |
| 4.1      | Overview: Before operation.....  | 15        |
| 4.2      | To insert the batteries .....  | 15        |
| 4.3      | To mount the wireless remote control holder .....                      | 15        |
| 4.4      | To turn on the power supply.....                                       | 16        |
| <b>5</b> | <b>Operation</b>   | <b>17</b> |
| 5.1      | Operation range .....  | 17        |
| 5.2      | When to use which feature.....   | 17        |
| 5.3      | Operation mode and temperature setpoint.....                           | 18        |
| 5.3.1    | To start/stop operation mode and to set the temperature .....          | 18        |
| 5.4      | Airflow rate .....   | 19        |
| 5.4.1    | To adjust the airflow rate .....                                       | 19        |
| 5.5      | Airflow direction.....   | 19        |
| 5.5.1    | To adjust the airflow direction .....                                  | 20        |
| 5.6      | Comfort airflow operation .....  | 20        |
| 5.6.1    | To start/stop Comfort airflow operation .....                          | 21        |
| 5.7      | Powerful operation .....   | 21        |
| 5.7.1    | To start/stop Powerful operation.....                                  | 22        |
| 5.8      | Econo operation .....  | 22        |
| 5.8.1    | To start/stop Econo operation .....                                    | 22        |
| 5.9      | OFF/ON timer operation .....   | 23        |
| 5.9.1    | To start/stop OFF timer operation .....                                | 23        |
| 5.9.2    | To start/stop ON timer operation .....                                 | 23        |
| 5.9.3    | To combine OFF timer and ON timer .....                                | 24        |
| 5.10     | Wireless LAN connection .....  | 24        |
| 5.10.1   | Precautions when using the wireless LAN.....                           | 24        |
| 5.10.2   | To install the ONECTA app.....   | 25        |
| 5.10.3   | To set the wireless connection.....                                    | 25        |
| <b>6</b> | <b>Energy saving and optimum operation</b>                             | <b>28</b> |
| <b>7</b> | <b>Maintenance and service</b>   | <b>30</b> |
| 7.1      | Overview: Maintenance and service.....                                 | 30        |
| 7.2      | To clean the indoor unit and wireless remote control.....              | 31        |
| 7.3      | To clean the front panel.....  | 32        |
| 7.4      | About the air filters .....  | 32        |
| 7.5      | To open the front panel .....  | 32        |
| 7.6      | To clean the air filters.....  | 32        |
| 7.7      | To close the front panel .....   | 33        |
| 7.8      | To take following items into account before a long idle period .....   | 33        |
| <b>8</b> | <b>Troubleshooting</b>   | <b>35</b> |
| 8.1      | Symptoms that are NOT system malfunctions .....                        | 37        |
| 8.1.1    | Symptom: A sound like water flowing is heard.....                      | 37        |
| 8.1.2    | Symptom: A blowing sound is heard.....                                 | 37        |
| 8.1.3    | Symptom: A ticking sound is heard .....                                | 37        |
| 8.1.4    | Symptom: A whistling sound is heard .....                              | 37        |
| 8.1.5    | Symptom: A clicking sound during operation or idle time is heard ..... | 37        |
| 8.1.6    | Symptom: A clapping sound is heard.....                                | 37        |
| 8.1.7    | Symptom: White mist comes out of a unit (Indoor unit).....             | 37        |

|           |   |           |
|-----------|---|-----------|
| 8.1.8     | Symptom: The units can give off odours.....   | 37        |
| 8.1.9     | Symptom: The outdoor fan rotates while the air conditioner is not in operation..... | 38        |
| 8.2       | Solving problems based on error codes .....   | 38        |
| 8.3       | Troubleshooting for wireless LAN connection.....                                    | 39        |
| <b>9</b>  | <b>Disposal</b>   | <b>41</b> |
| <b>10</b> | <b>Glossary</b>   | <b>42</b> |

# 1 About the documentation

## 1.1 About this document

Thank you for purchasing this product. Please:

- Keep the documentation for future reference.

### Target audience

End users



#### INFORMATION

This appliance is intended to be used by expert or trained users in shops, in light industry, and on farms, or for commercial and household use by lay persons.

### Documentation set

This document is part of a documentation set. The complete set consists of:

- **General safety precautions:**
  - Safety instructions that you must read before operating your system
  - Format: Paper (in the box of the indoor unit)
- **Operation manual:**
  - Quick guide for basic usage
  - Format: Paper (in the box of the indoor unit)
- **User reference guide:**
  - Detailed step-by-step instructions and background information for basic and advanced usage
  - Format: Digital files on <https://www.daikin.eu>. Use the search function 🔍 to find your model.

Latest revisions of the supplied documentation may be available on the regional Daikin website or via your installer.

The original instructions are written in English. All other languages are translations of the original instructions.

## 1.2 Meaning of warnings and symbols



#### DANGER

Indicates a situation that results in death or serious injury.



#### DANGER: RISK OF ELECTROCUTION

Indicates a situation that could result in electrocution.



#### DANGER: RISK OF BURNING/SCALDING

Indicates a situation that could result in burning/scalding because of extreme hot or cold temperatures.

**DANGER: RISK OF EXPLOSION**

Indicates a situation that could result in explosion.

**WARNING**

Indicates a situation that could result in death or serious injury.

**WARNING: FLAMMABLE MATERIAL**

A2L

**WARNING: MILDLY FLAMMABLE MATERIAL**

The refrigerant inside this unit is mildly flammable.

**CAUTION**

Indicates a situation that could result in minor or moderate injury.

**NOTICE**

Indicates a situation that could result in equipment or property damage.

**INFORMATION**

Indicates useful tips or additional information.

Symbols used on the unit:

| Symbol | Explanation  |
|--------|--|
|        | Before installation, read the installation and operation manual, and the wiring instruction sheet. |
|        | Before performing maintenance and service tasks, read the service manual.                          |
|        | For more information, see the installer and user reference guide.                                  |
|        | The unit contains rotating parts. Be careful when servicing or inspecting the unit.                |

Symbols used in the documentation:

| Symbol | Explanation   |
|--------|---|
|        | Indicates a figure title or a reference to it.<br><b>Example:</b> "▲ 1-3 Figure title" means "Figure 3 in chapter 1". |
|        | Indicates a table title or a reference to it.<br><b>Example:</b> "■ 1-3 Table title" means "Table 3 in chapter 1".    |

## 2 User safety instructions

Always observe the following safety instructions and regulations.

### 2.1 General



#### **WARNING**

If you are NOT sure how to operate the unit, contact your installer.



#### **WARNING**

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children SHALL NOT play with the appliance.

Cleaning and user maintenance SHALL NOT be made by children without supervision.



#### **WARNING**

To prevent electrical shocks or fire:

- Do NOT rinse the unit.
- Do NOT operate the unit with wet hands.
- Do NOT place any objects containing water on the unit.



#### **CAUTION**

- Do NOT place any objects or equipment on top of the unit.
- Do NOT sit, climb or stand on the unit.

- Units are marked with the following symbol:



This means that electrical and electronic products may NOT be mixed with unsorted household waste. Do NOT try to dismantle the system yourself: dismantling the system, treatment of the refrigerant, of oil and of other parts MUST be done by an authorised installer and MUST comply with applicable legislation.

Units MUST be treated at a specialised treatment facility for reuse, recycling and recovery. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health. For more information, contact your installer or local authority.

- Batteries are marked with the following symbol:



This means that the batteries may NOT be mixed with unsorted household waste. If a chemical symbol is printed beneath the symbol, this chemical symbol means that the battery contains a heavy metal above a certain concentration.

Possible chemical symbols are: Pb: lead (>0.004%).

Waste batteries MUST be treated at a specialised treatment facility for reuse. By ensuring waste batteries are disposed of correctly, you will help to prevent potential negative consequences for the environment and human health.

## 2.2 Instructions for safe operation



**A2L WARNING: MILDLY FLAMMABLE MATERIAL**

The refrigerant inside this unit is mildly flammable.



**CAUTION**

The indoor unit contains radio equipment, minimum separation distance between the radiating part of the equipment and the user is 10 cm.



**CAUTION**

Do NOT insert fingers, rods or other objects into the air inlet or outlet. When the fan is rotating at high speed, it will cause injury.



**WARNING**

- Do NOT modify, disassemble, remove, reinstall or repair the unit yourself as incorrect dismantling or installation may cause an electrical shock or fire. Contact your dealer.
- In case of accidental refrigerant leaks, make sure there are no naked flames. The refrigerant itself is entirely safe, non-toxic and mildly flammable, but it will generate toxic gas when it accidentally leaks into a room where combustible air from fan heaters, gas cookers, etc. is present. Always have qualified service personnel confirm that the point of leakage has been repaired or corrected before resuming operation.



**CAUTION**

ALWAYS use the wireless remote control or other user interface (if applicable) to adjust the position of the flaps and louvers. When the flaps and louvers are swinging and you move them forcibly by hand, the mechanism will break.



**CAUTION**

NEVER expose little children, plants or animals directly to the airflow.



**WARNING**

Do NOT place a flammable spray bottle near the air conditioner and do NOT use sprays near the unit. Doing so may result in a fire.



**CAUTION**

Do NOT operate the system when using a room fumigation-type insecticide. Chemicals could collect in the unit, and endanger the health of people who are hypersensitive to chemicals.



**WARNING**

- The refrigerant inside the unit is mildly flammable, but normally does NOT leak. If the refrigerant leaks in the room and comes in contact with fire from a burner, a heater, or a cooker, this may result in fire, or the formation of a harmful gas.
- Turn OFF any combustible heating devices, ventilate the room, and contact the dealer where you purchased the unit.
- Do NOT use the unit until a service person confirms that the part from which the refrigerant leaked has been repaired.

**WARNING**

- Do NOT pierce or burn refrigerant cycle parts.
- Do NOT use cleaning materials or means to accelerate the defrosting process other than those recommended by the manufacturer.
- Be aware that the refrigerant inside the system is odourless.

**WARNING**

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (e.g. open flames, an operating gas appliance, or an operating electric heater). The room size shall be as specified in the General safety precaution.

**DANGER: RISK OF ELECTROCUTION**

To clean the air conditioner or air filter, be sure to stop operation and turn all power supplies OFF. Otherwise, an electrical shock and injury may result.

**CAUTION**

After a long use, check the unit stand and fitting for damage. If damaged, the unit may fall and result in injury.

**WARNING**

Be careful with ladders when working in high places.



**WARNING**

Improper detergents or cleaning procedure may cause damage on plastic components or water leakage. Splashed detergent on electric components, such as motors, may cause failure, smoke or ignition.



**DANGER: RISK OF ELECTROCUTION**

Before cleaning, be sure to stop the operation, turn the breaker OFF or pull out the supply cord. Otherwise, an electrical shock and injury may result.



**WARNING**

**Stop operation and shut OFF the power if anything unusual occurs (burning smells etc.).**

Leaving the unit running under such circumstances may cause breakage, electrical shock or fire. Contact your dealer.

## 3 About the system



A2L

### WARNING: MILDLY FLAMMABLE MATERIAL

The refrigerant inside this unit is mildly flammable.



### NOTICE

Do NOT use the system for other purposes. In order to avoid any quality deterioration, do NOT use the unit for cooling precision instruments, food, plants, animals, or works of art.

### 3.1 Indoor unit



### CAUTION

Do NOT insert fingers, rods or other objects into the air inlet or outlet. When the fan is rotating at high speed, it will cause injury.



### INFORMATION

The sound pressure level is less than 70 dBA.




### WARNING

- Do NOT modify, disassemble, remove, reinstall or repair the unit yourself as incorrect dismantling or installation may cause an electrical shock or fire. Contact your dealer.
- In case of accidental refrigerant leaks, make sure there are no naked flames. The refrigerant itself is entirely safe, non-toxic and mildly flammable, but it will generate toxic gas when it accidentally leaks into a room where combustible air from fan heaters, gas cookers, etc. is present. Always have qualified service personnel confirm that the point of leakage has been repaired or corrected before resuming operation.




### INFORMATION

The following figures are examples and may NOT completely match your system layout.

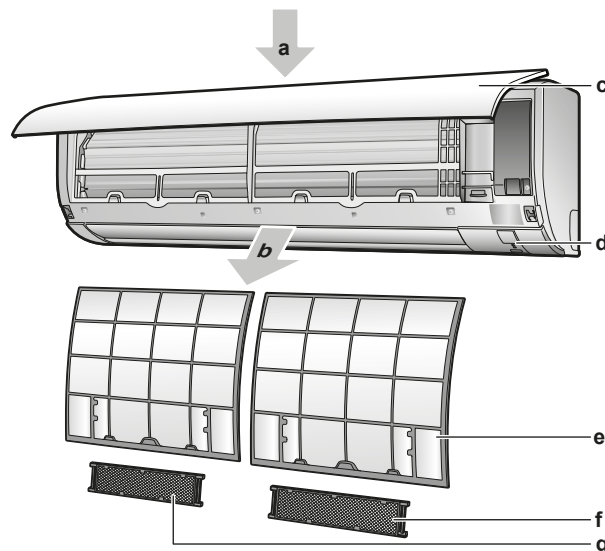

- a** Air inlet
- b** Air outlet
- c** Front panel
- d** Indoor unit display
- e** Air filter
- f** Titanium apatite deodorising filter
- g** Silver particle filter

### 3.1.1 Indoor unit display

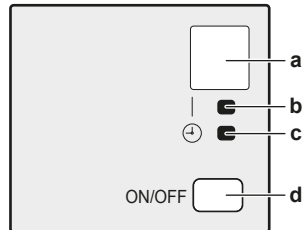

- a** Signal receiver
- b** Operation lamp
- c** Timer lamp
- d** ON/OFF button

#### ON/OFF button

If the wireless remote control (user interface) is missing, you can use the ON/OFF button on the indoor unit to start/stop operation. When operation is started using this button, the following settings are used:

- Operation mode = Automatic
- Temperature setting = 25°C
- Airflow rate = Automatic

## 3.2 About the user interface

### Wireless remote control



#### INFORMATION


The indoor unit is delivered with the wireless remote control as the user interface. This manual describes only operation with this user interface. If another user interface is connected, refer to the operation manual of the connected user interface.

- **Direct sunlight.** Do NOT expose the wireless remote control to direct sunlight.
- **Dust.** Dust on the signal transmitter or receiver will reduce sensitivity. Wipe off dust with a soft cloth.
- **Fluorescent lights.** Signal communication might be disabled if fluorescent lamps are in the room. In that case, contact your installer.
- **Other appliances.** If the wireless remote control signals operate other appliances, move the other appliances, or contact your installer.
- **Curtains.** Make sure that curtains or other objects do NOT block the signal between the unit and the wireless remote control.

**NOTICE**


- Do NOT drop the wireless remote control.
- Do NOT let the wireless remote control get wet.

## 3.2.1 Components: Wireless remote control

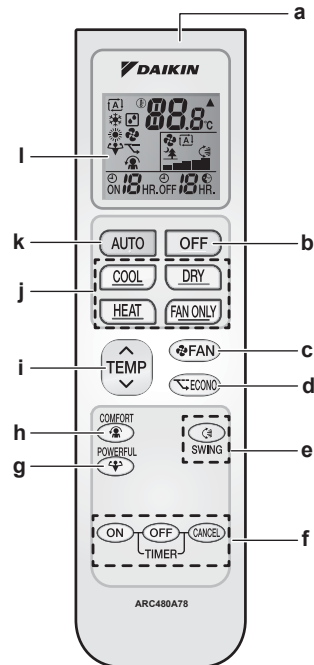





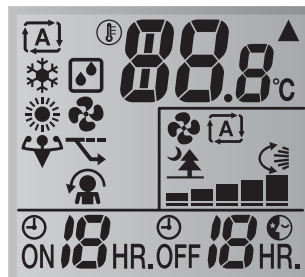











- a Signal receiver
- b OFF button
- c Fan setting button
- d Econo operation button
- e Swing button
- f Timer setting buttons (ON, OFF, cancel)
- g Powerful operation button
- h Comfort operation button
- i Temperature adjustment button
- j Operation mode buttons
- k Automatic operation mode button
- l LCD display


## 3.2.2 Status: Wireless remote control LCD



| Icon | Description                |
|------|----------------------------|
|      | Operation mode = Automatic |
|      | Operation mode = Drying    |
|      | Operation mode = Heating   |
|      | Operation mode = Cooling   |

| Icon  | Description  |
|---|--|
|    | Operation mode = Fan only  |
|    | Powerful operation is active                                       |
|    | Econo operation is active  |
|   |  |
|    | The indoor unit receives a signal from the wireless remote control |
|    | Current temperature setting  |
|    | Airflow rate = Automatic   |
|    | Airflow rate = Indoor unit quiet                                   |
|    | Airflow rate = High  |
|    | Airflow rate = Medium high   |
|    | Airflow rate = Medium  |
|    | Airflow rate = Medium low  |
|    | Airflow rate = Low   |
|   |  |
|  | Comfort operation is active  |
|  | Automatic vertical swing is active                                 |
|   |  |
|  | ON timer is active   |
|  | OFF timer is active  |

### 3.2.3 To operate the wireless remote control

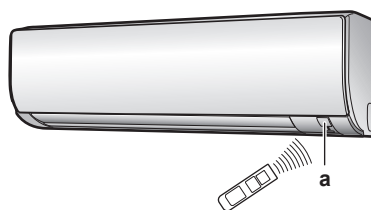

a Infrared signal receiver

- 1 Aim the signal transmitter at the infrared signal receiver on the indoor unit (maximum distance for communication is 7 m).

**Result:** When the indoor unit receives a signal from the wireless remote control, you will hear a sound:

| Sound     | Description       |
|-----------|-------------------|
| Beep-beep | Operation starts. |
| Beep      | Setting changes.  |
| Long beep | Operation stops.  |

## 4 Before operation

### 4.1 Overview: Before operation

This chapter describes what you have to do before operating the unit.

#### Typical workflow


Before operation usually consist of the following stages:

- Inserting the batteries in the wireless remote control.
- Fixing the wireless remote control to the wall.
- Turning on the power supply.


### 4.2 To insert the batteries

The batteries will last for about 1 year.

- 1 Remove the back cover.
- 2 Insert both batteries at once.
- 3 Put the cover back.

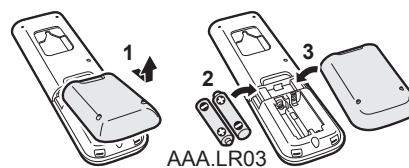

### 4.3 To mount the wireless remote control holder

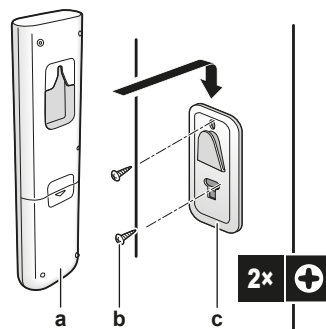

- a Wireless remote control
- b Screws (field supply)
- c Wireless remote control holder

- 1 Choose a place where the signals reach the unit.
- 2 Attach the holder with screws to the wall or a similar location.
- 3 Hang the wireless remote control on the holder.

## 4.4 To turn on the power supply

**1** Turn the circuit breaker on.

**Result:** The flap of the indoor unit will open and close to set the reference position.



## 5 Operation

### 5.1 Operation range

Use the system in the following temperature and humidity ranges for safe and effective operation.






| Operation mode            | Operation range   |
|---------------------------|---|
| Cooling <sup>(a)(b)</sup> | <ul style="list-style-type: none"> <li>▪ Outdoor temperature: -10~48°C DB</li> <li>▪ Indoor temperature: 18~32°C DB</li> <li>▪ Indoor humidity: ≤80%</li> </ul> |
| Heating <sup>(a)</sup>    | <ul style="list-style-type: none"> <li>▪ Outdoor temperature: -15~24°C DB</li> <li>▪ Indoor temperature: 10~30°C DB</li> </ul>                                  |
| Drying <sup>(a)</sup>     | <ul style="list-style-type: none"> <li>▪ Outdoor temperature: -10~48°C DB</li> <li>▪ Indoor temperature: 18~32°C DB</li> <li>▪ Indoor humidity: ≤80%</li> </ul> |




<sup>(a)</sup> A safety device might stop the operation of the system if the unit runs outside its operation range.

<sup>(b)</sup> Condensation and water dripping might occur if the unit runs outside its operation range.

### 5.2 When to use which feature

You can use the following table to determine which features to use:

| Feature   | Tasks   |
|---|---|
| <b>Basic features</b>   |   |
|  Operation modes and temperature | To start/stop the system and to set the temperature: <ul style="list-style-type: none"> <li>▪ Heat up or cool down a room.</li> <li>▪ Blow air in a room without heating or cooling.</li> <li>▪ Decrease the humidity in a room.</li> <li>▪ In Automatic mode, automatically select an appropriate temperature and operation mode.</li> </ul> |
|  Airflow direction               | To adjust the airflow direction   |
|  Airflow rate                    | To adjust the amount of air blown into the room.<br>To run more quietly.  |
| <b>Advanced features</b>  |   |
|  Econo                           | To use the system when you are also using other power-consuming appliances.<br>To save energy.  |
|  Comfort                         | To provide a comfortable airflow that does NOT come in direct contact with people.  |






| Feature  | Tasks                                       |
|--|---|
|  Powerful   | To cool down or heat up the room quickly.   |
|  ON timer +  OFF timer | To automatically turn ON or OFF the system. |

### 5.3 Operation mode and temperature setpoint

**When.** Adjust the system operation mode and set the temperature when you want to:

- Heat up or cool down a room
- Blow air in a room without heating or cooling
- Decrease the humidity in a room

**What.** The system operates differently, depending on the user selection.





 

| Setting   | Description   |
|---|---|
|  Automatic | The system cools down or heats up a room to the temperature setpoint. It automatically switches between cooling and heating if necessary. |
|  Drying    | The system decreases the humidity in a room.  |
|  Heating  | The system heats up a room to the temperature setpoint.   |
|  Cooling | The system cools down a room to the temperature setpoint.   |
|  Fan     | The system only controls the airflow (airflow rate and airflow direction).<br>The system does NOT control the temperature.                |

**Additional info:**


- **Outside temperature.** The system's cooling or heating effect decreases when the outside temperature is too high or too low.
- **Defrost operation.** During heating operation, frost might occur on the outdoor unit and decrease the heating capacity. In that case, the system automatically switches to defrosting operation to remove the frost. During defrosting operation, hot air is NOT blown from the indoor unit.

#### 5.3.1 To start/stop operation mode and to set the temperature



: Operation mode = Automatic  
: Operation mode = Drying  
: Operation mode = Heating  
: Operation mode = Cooling  
: Operation mode = Fan only  
 **88°C**: Shows the set temperature.

- 1 Start operation by pressing one of the following buttons.

| Mode                | Press | Result   |
|---------------------|-------|--|
| Automatic operation |       | <br>The operation lamp lights up. |
| Cooling operation   |       |  |
| Drying operation    |       |  |
| Heating operation   |       |  |
| Fan only operation  |       |  |

- 2 Press or on the button one or more times to set the temperature. You CANNOT adjust the temperature in **drying** or **fan only** operation mode.

| Cooling operation | Heating operation | Automatic operation | Drying or fan only operation |
|-------------------|-------------------|---------------------|------------------------------|
| 18~32°C           | 10~30°C           | 18~30°C             | —                            |

- 3 Press to stop operation.

**Result:** The operation lamp goes off.

## 5.4 Airflow rate

- 1 Press to choose:

|  |  |
|--|--|
|  | 5 airflow rate levels, from "■" to "■■■■"  |
|  | Automatic airflow rate operation   |
|  | Indoor unit quiet operation. When the airflow rate is set to "■", the noise from the unit will be reduced. |



### INFORMATION

- If the unit reaches the temperature setpoint in cooling or heating mode, the fan will stop operating.
- When using drying operation mode, you CANNOT adjust the airflow rate setting.

### 5.4.1 To adjust the airflow rate

- 1 Press to change the airflow setting as follows:



## 5.5 Airflow direction

**When.** Adjust the airflow direction as desired.

**What.** The system directs the airflow differently, depending on the user selection (swinging or fixed position). It does so by moving the vertical blades.


| Setting             | Airflow direction  |
|---------------------|--------------------|
| Vertical auto swing | Moves up and down. |

| Setting | Airflow direction          |
|---------|----------------------------|
| [—]     | Stays in a fixed position. |

**CAUTION**

- ALWAYS use a user interface (e.g. wireless remote control) to adjust the angle of the flap. When the flap is swinging and you move it forcibly by hand, the mechanism will break.
- Be careful when adjusting the louvers. Inside the air outlet, a fan is rotating at high speed.

The movable range of the flap varies according to the operation mode. The flap will stop at the upper position when the airflow rate is changed to low during the up and down swing setting.

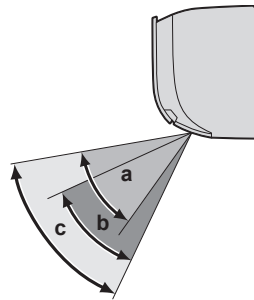

- a Flap range in cooling or drying operation
- b Flap range in heating operation
- c Flap range in fan only operation

### 5.5.1 To adjust the airflow direction

- To use auto swing, press .

**Result:** will appear on the LCD.

**Result:** The flap (horizontal blade) will begin to swing.


- To use fixed position, press when the flap reaches the desired position.

**Result:** disappears from the LCD.


## 5.6 Comfort airflow operation

This operation can be used in **heating** or **cooling** operation mode. It will provide a comfortable wind that will NOT come in direct contact with people. The system automatically sets the fixed airflow position upward in Cooling and downward in Heating operation mode.

### Cooling operation mode

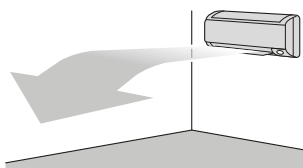

### Heating operation mode

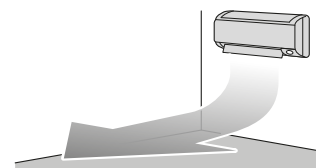

**INFORMATION**

Powerful and Comfort airflow operation CANNOT be used at the same time. The last selected function takes priority. If the vertical automatic swing is selected, Comfort airflow operation will be cancelled.

## 5.6.1 To start/stop Comfort airflow operation


- 1 Press  to start.

**Result:** The flap position will change,  is displayed on the LCD, and the airflow rate is set to automatic.

| Mode           | Position of flap... |
|----------------|---------------------|
| Cooling/Drying | Up                  |
| Heating        | Down                |

**Note:** Comfort airflow operation is NOT available in Fan only mode.

- 2 Press  to stop.

**Result:** The flap will return to the position from before the Comfort airflow mode;  disappears from the LCD.

## 5.7 Powerful operation

This operation quickly maximizes the cooling/heating effect in any operation mode. You can get the maximum capacity.

| Mode            | Airflow rate   |
|-----------------|--|
| Cooling/Heating | <ul style="list-style-type: none"> <li>▪ To maximize the cooling/heating effect, the capacity of outdoor unit is increased.</li> <li>▪ The airflow rate is fixed to the maximum setting.</li> <li>▪ The temperature and airflow settings CANNOT be changed.</li> </ul> |
| Drying          | <ul style="list-style-type: none"> <li>▪ The temperature setting is lowered by 2.5°C.</li> <li>▪ The airflow rate is slightly increased.</li> </ul>  |
| Fan only        | The airflow rate is fixed to the maximum setting.  |


**INFORMATION**

Powerful operation CANNOT be used together with Econo and Comfort airflow operation. The last selected function takes priority.

Powerful operation will NOT increase the capacity of the unit if it already operates at maximum capacity.



## 5.7.1 To start/stop Powerful operation

1 Press  to start.

**Result:**  is displayed on the LCD. Powerful operation runs for 20 minutes; after that, operation returns to the previously set mode.

2 Press  to stop.

**Result:**  disappears from the LCD.


**Note:** Powerful operation can be set only when the unit is running. If you press  or if you change operation mode, operation will be cancelled;  disappears from the LCD.

## 5.8 Econo operation

This is a function which enables efficient operation by limiting the maximum power consumption value. This function is useful for cases in which attention should be paid to ensure a circuit breaker will not trip when the product runs alongside other appliances.

**INFORMATION**

- Powerful and Econo operation CANNOT be used at the same time. The last selected function takes priority.
- Econo operation reduces power consumption of the outdoor unit by limiting the rotation speed of the compressor. If power consumption is already low, Econo operation will NOT further reduce power consumption.

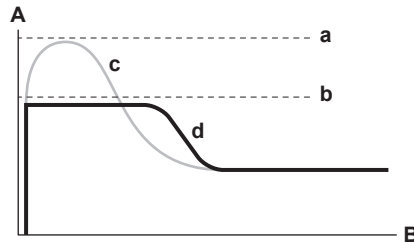

- A** Running current and power consumption
- B** Time
- a** Maximum during normal operation
- b** Maximum during Econo operation
- c** Normal operation
- d** Econo operation

- The diagram is for illustrative purposes only.
- The maximum running current and power consumption of the air conditioner in Econo operation varies with the connected outdoor unit.

## 5.8.1 To start/stop Econo operation

1 Press  to start.

**Result:**  is displayed on the LCD.

2 Press  to stop.

**Result:**  disappears from the LCD.

## 5.9 OFF/ON timer operation

Timer functions are useful for automatically switching the air conditioner off/on at night or in the morning. You can also use OFF timer and ON timer in combination.



### INFORMATION

Program the timer again in case of:

- A breaker has turned the unit off.
- A power failure.
- After replacing batteries in the wireless remote control.

### 5.9.1 To start/stop OFF timer operation



### INFORMATION

When you set the ON/OFF timer, the time setting is stored in the memory. The memory will be reset when the wireless remote control batteries are replaced.

#### Night set mode

When the OFF timer is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in cooling, 2.0°C down in heating) to prevent excessive cooling/heating and ensure a comfortable sleeping temperature.

Use this feature if the unit is operating and you want to stop operation after a certain time.

- 1 Press **OFF**.

**Result:** **OFF** <sup>⊕</sup> **1**HR. is displayed on the LCD and the timer lamp lights up.

- 2 Press **OFF** again if you want to change the time setting.



### INFORMATION

Each time **OFF** is pressed, the time setting advances by 1 hour. The timer can be set between 1 to 12 hours.

**Example:** If **OFF** <sup>⊕</sup> **5**HR. is set when the unit is operating, operation will stop after 5 hours.

- 3 To cancel the setting, press **CANCEL**.

**Result:** **OFF** <sup>⊕</sup> and the time setting disappear from the LCD and the timer lamp goes off.

### 5.9.2 To start/stop ON timer operation

Use this feature if the unit is NOT operating and you want to start operation after a certain time.

- 1 Press **ON**.

**Result:** **ON** <sup>⊕</sup> **1**HR. is displayed on the LCD and the timer lamp lights up.

- 2 Press **ON** again if you want to change the time setting.

**INFORMATION**

Each time **ON** is pressed, the time setting advances by 1 hour. The timer can be set between 1 to 12 hours.

**Example:** If **ON** **2 HR.** is set when the unit is NOT operating, operation will start after 2 hours.

**3** To cancel the setting, press **CANCEL**.

 
**Result:** **ON** and the time setting disappear from the LCD and the timer lamp goes off.

### 5.9.3 To combine OFF timer and ON timer

**1** To set the timers, refer to "[5.9.1 To start/stop OFF timer operation](#)" [▶ 23] and "[5.9.2 To start/stop ON timer operation](#)" [▶ 23].

**Result:** **OFF** and **ON** are displayed on the LCD.

**2** Example of what is displayed on the LCD if you combine the 2 timers:




**3** To set the timers, refer to "[5.9.1 To start/stop OFF timer operation](#)" [▶ 23] and "[5.9.2 To start/stop ON timer operation](#)" [▶ 23].

**Result:** **OFF** and **ON** are displayed on the LCD.

**Example:**

 **4** If  is set when the unit is operating.

**Result:** Operation **stops** in 1 hour and then **starts** 7 hours later.

**5** If  is set when the unit is NOT operating.

**Result:** Operation **starts** in 2 hours and then **stops** 3 hours later.

## 5.10 Wireless LAN connection

The customer is responsible for providing:

- Smartphone or tablet with minimum supported version of Android or iOS, specified on [app.daikineurope.com](http://app.daikineurope.com).
- Internet line and communication device, such as a modem, router, etc.
- Wireless LAN access point
- Installed free ONECTA application

### 5.10.1 Precautions when using the wireless LAN


Do NOT use near:

- **Medical equipment.** E.g. persons using cardiac pacemakers or defibrillators. This product may cause electromagnetic interference.
- **Auto-control equipment.** E.g. automatic doors or fire alarm equipment. This product may cause faulty behaviour of the equipment.
- **Microwave oven.** It may affect wireless LAN communications.



## 5.10.2 To install the ONECTA app

- 1 Go to Google Play (for Android devices) or the App Store (for iOS devices) and search for "ONECTA".
- 2 Follow the directions on the screen to install the ONECTA app.

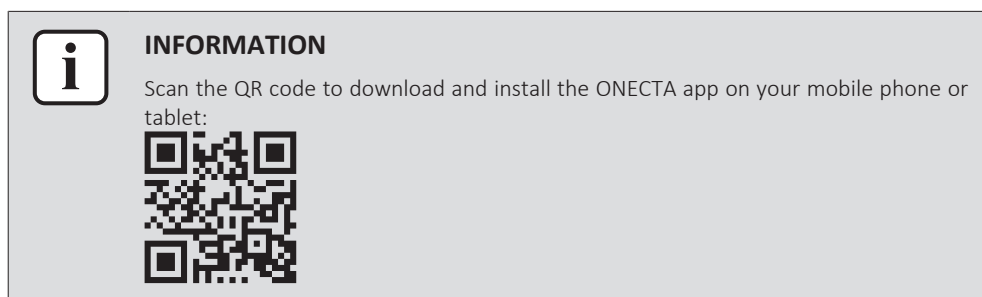

## 5.10.3 To set the wireless connection

There are two options to connect the wireless adapter with your smart device.

- **Connect the wireless LAN to your smart device directly.**
- **Connect the wireless LAN to your home network.** The wireless LAN will communicate with your smart device in your home network using a modem, router or a similar device.

For more information and FAQ refer to [app.daikineurope.com](http://app.daikineurope.com).


- 1 Stop operation before setting the wireless connection.
- 2 Use the wireless remote control to select the wireless LAN setting menu.

**Note:** During setting, always aim the wireless remote control at the infrared signal receiver on the unit.


| Menu | Description   |
|------|---|
| !    | Connection status check and Access Point mode (connection via SSID and KEY) |
| ?    | WPS connection setting  |
| R    | Reset to factory default  |
| OFF  | Wireless LAN OFF  |

**To confirm the wireless LAN connection status**

**Prerequisite:** The operation is turned off (the default screen is blank).

- 1 When on the default screen, hold  for at least 5 seconds.


**Result:** The SP (wireless connection setting menu) appears. ! is blinking.

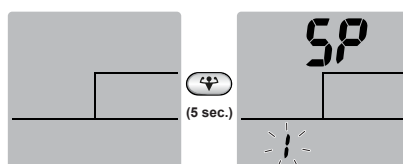

- 2 Press  to confirm the selection.

**Result:** ! is blinking.

- 3 Check the operation and timer LEDs on the indoor unit display.

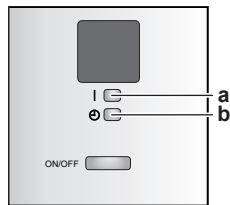

a Operation LED  
b Timer LED

| If operation LED... | ...and timer LED...           | ...then wireless LAN is...   |
|---------------------|-------------------------------|--|
| blinks              | blinks                        | not connected  |
| is off              | blinks in 0.5 second interval | running and ready to connect to the home network via WPS button on the router.   |
| is off              | blinks in 1 second interval   | <ul style="list-style-type: none"> <li>connected to the home network via SSID + KEY.</li> </ul> or <ul style="list-style-type: none"> <li>connected to the home network via WPS button on the router.</li> </ul> |

4 Press **CANCEL** to exit the menu.

**Result:** The display will return to the default screen.

### To connect the wireless LAN to your home network

The wireless adapter can be connected to your home network using the:

- WPS button (Wi-Fi Protected Setup) on the router (if present),
- The SSID (Service Set Identifier) and the KEY (password) - located on the unit.

### To connect using the WPS button

### To reset the connection setting to the factory default

Reset the connection setting to the factory default in case you want to:


- disconnect the wireless LAN and the communication device (e.g. router) or smart device,
- repeat the setting if the connection was unsuccessful.

**Prerequisite:** The operation is turned off (the default screen is blank).

1 When on the default screen, hold **WPS** for at least 5 seconds.

**Result:** The SP menu **I** appears. **I** is blinking.

2 Change to the SP menu **R** by pressing **TEMP** twice or **TEMP** repeatedly.

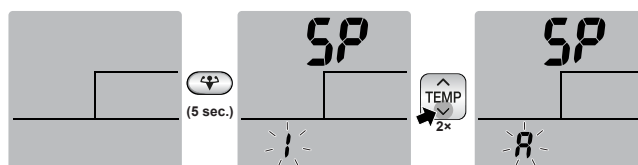

3 Hold **WPS** for at least 2 seconds to confirm the selection.

**Result:** **R** is blinking. The operation and timer LEDs are blinking at the same time in 1 s interval. The setting is reset to the factory default.

4 Press **CANCEL** to exit the menu.



**Result:** The display will return to the default screen.

### To turn off the wireless LAN connection


If you want to turn off the wireless connection function:

**Prerequisite:** The operation is turned off (the default screen is blank).

- 1 When on the default screen, hold  for at least 5 seconds.

**Result:** The SP menu  appears.  is blinking.

- 2 Change to the SP menu OFF by pressing  once or  repeatedly.

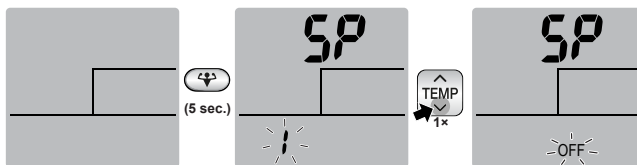

- 3 Hold  for at least 2 seconds to confirm the selection.

**Result:** OFF is blinking. The operation and timer LEDs are blinking alternately in 1 s interval. Communication is OFF.

- 4 Press  to exit the menu.

**Result:** The display will return to the default screen.

## 6 Energy saving and optimum operation



### INFORMATION

- Even if the unit is turned OFF, it consumes electricity.
- When the power turns back on after a power break, the previously selected mode will be resumed.



### CAUTION

NEVER expose little children, plants or animals directly to the airflow.



### NOTICE

Do NOT place objects that should NOT get wet below the unit. Condensation on the unit or refrigerant pipes, or drain blockage may cause dripping. **Possible consequence:** Objects under the unit can get dirty or damaged.



### WARNING

Do NOT place a flammable spray bottle near the air conditioner and do NOT use sprays near the unit. Doing so may result in a fire.



### CAUTION

Do NOT operate the system when using a room fumigation-type insecticide. Chemicals could collect in the unit, and endanger the health of people who are hypersensitive to chemicals.

Observe the following precautions to ensure the system operates properly.

- Prevent direct sunlight from entering a room during cooling operation by using curtains or blinds.
- Make sure the area is well ventilated. Do NOT block any ventilation openings.
- Ventilate often. Extended use requires special attention to ventilation.
- Keep doors and windows closed. If the doors and windows remain open, air will flow out of your room causing a decrease in the cooling or heating effect.
- Be careful NOT to cool or heat too much. To save energy, keep the temperature setting at a moderate level.
- NEVER place objects near the air inlet or the air outlet of the unit. Doing so may cause a reduced heating/cooling effect or stop operation.
- Turn the breaker off when the unit is NOT used for longer periods of time. If the breaker is on, the unit consumes electricity. Before restarting the unit, turn the breaker on 6 hours before operation to ensure smooth running.
- Condensation may form if the humidity is above 80% or if the drain outlet gets blocked.
- Adjust the room temperature properly for a comfortable environment. Avoid excessive heating or cooling. Notice that it may take some time for the room temperature to reach the set temperature. Consider using the timer setting options.
- Adjust the air flow direction to avoid cool air from gathering on the floor or warm air against the ceiling. (Up during cooling or dry operation to the ceiling and down during heating operation.)
- Avoid direct air flow to room inhabitants.

- Operate the system within the recommended temperature range (26~28°C for cooling and 20~24°C for heating) to save energy.

# 7 Maintenance and service

## 7.1 Overview: Maintenance and service

The installer has to perform a yearly maintenance.

Periodical inspections for refrigerant leaks may be required depending on the applicable legislation. Contact your installer for more information.

### About the refrigerant

This product contains fluorinated greenhouse gases. Do NOT vent gases into the atmosphere.

Refrigerant type: R32

Global warming potential (GWP) value: 675



#### NOTICE

Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO<sub>2</sub> equivalent.

**Formula to calculate the quantity in CO<sub>2</sub> equivalent tonnes:** GWP value of the refrigerant × total refrigerant charge [in kg]/1000

Contact your installer for more information.



#### NOTICE

Maintenance **MUST** be done by an authorised installer or service agent.

We recommend performing maintenance at least once a year. However, applicable legislation might require shorter maintenance intervals.



#### WARNING

- The refrigerant inside the unit is mildly flammable, but normally does NOT leak. If the refrigerant leaks in the room and comes in contact with fire from a burner, a heater, or a cooker, this may result in fire, or the formation of a harmful gas.
- Turn OFF any combustible heating devices, ventilate the room, and contact the dealer where you purchased the unit.
- Do NOT use the unit until a service person confirms that the part from which the refrigerant leaked has been repaired.



#### WARNING

- Do NOT pierce or burn refrigerant cycle parts.
- Do NOT use cleaning materials or means to accelerate the defrosting process other than those recommended by the manufacturer.
- Be aware that the refrigerant inside the system is odourless.



#### WARNING

The appliance shall be stored in a room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).

**DANGER: RISK OF ELECTROCUTION**

To clean the air conditioner or air filter, be sure to stop operation and turn all power supplies OFF. Otherwise, an electrical shock and injury may result.

**WARNING**

To prevent electrical shocks or fire:

- Do NOT rinse the unit.
- Do NOT operate the unit with wet hands.
- Do NOT place any objects containing water on the unit.

**CAUTION**

After a long use, check the unit stand and fitting for damage. If damaged, the unit may fall and result in injury.

**CAUTION**

Do NOT touch the heat exchanger fins. These fins are sharp and could result in cutting injuries.

**WARNING**

Be careful with ladders when working in high places.

Following symbols may occur on the indoor unit:

| Symbol | Explanation  |
|--------|--|
|        | Measure the voltage at the terminals of main circuit capacitors or electrical components before servicing. |

## 7.2 To clean the indoor unit and wireless remote control

**DANGER: RISK OF ELECTROCUTION**


Before cleaning, be sure to stop the operation, turn the breaker OFF or pull out the supply cord. Otherwise, an electrical shock and injury may result.

**NOTICE**

- Do NOT use gasoline, benzene, thinner, polishing powder or liquid insecticide.  
**Possible consequence:** Discoloration and deformation.
- Do NOT use water or air of 40°C or higher. **Possible consequence:** Discoloration and deformation.
- Do NOT use polishing compounds.
- Do NOT use a scrubbing brush. **Possible consequence:** The surface finishing peels off.
- As an end user, you may NEVER clean inside parts of the unit by yourself; this work must be performed by a qualified service person. Contact your dealer.

- 1 Clean with a soft cloth. If it is difficult to remove stains, use water or a neutral detergent.

### 7.3 To clean the front panel

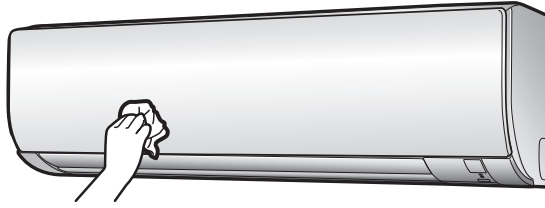

- 1 Clean the front panel with a soft cloth. If it is difficult to remove stains, use water or a neutral detergent.


### 7.4 About the air filters

Operating the unit with dirty filters means that the filter:

- CANNOT deodorise the air,
- CANNOT clean the air,
- poor heating/cooling,
- causes odour.


### 7.5 To open the front panel

- 1 Hold the front panel by the panel tabs on both sides and open it.

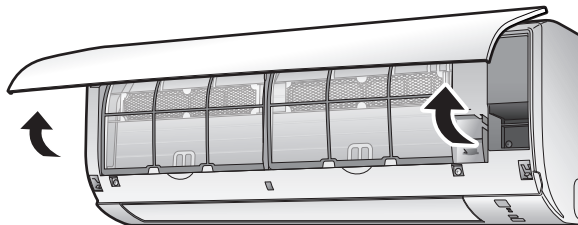


### 7.6 To clean the air filters

- 1 Push the tab at the centre of each air filter, then pull it down.
- 2 Pull out the air filters.

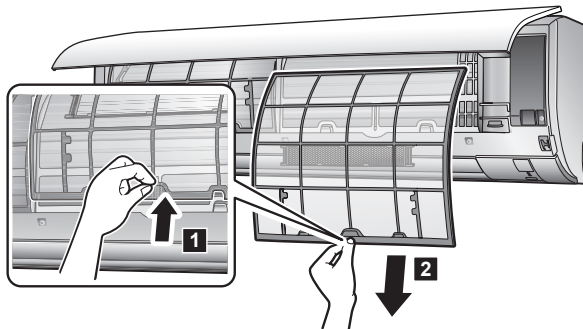


- 3 Wash the air filters with water or clean them with a vacuum cleaner.



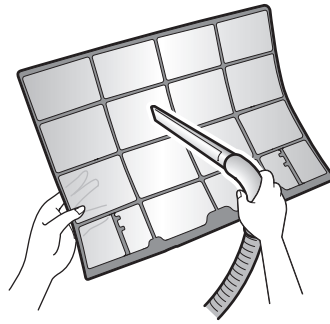

- 4 Soak in lukewarm water for about 10 to 15 minutes.

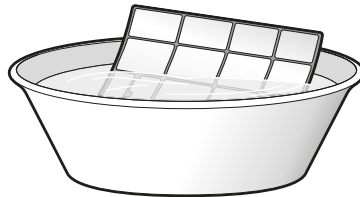

- 5 Install all filters back in their original positions. Make sure filters are completely dry before installation.



#### INFORMATION

- If the dust does NOT come off easily, wash them with a neutral detergent diluted in lukewarm water. Dry the air filters in the shade.
- It is recommended to clean the air filters every 2 weeks.




#### INFORMATION

- If the dust does NOT come off easily, wash the air filters with a neutral detergent diluted in lukewarm water. Dry the air filters in the shade.
- Be sure to remove the titanium apatite deodorising and silver particle filters.
- It is recommended to clean the air filters every 2 weeks.

## 7.7 To close the front panel

- 1 Set the filters as they were.
- 2 Gently press the front panel at both sides and at the center until it clicks.

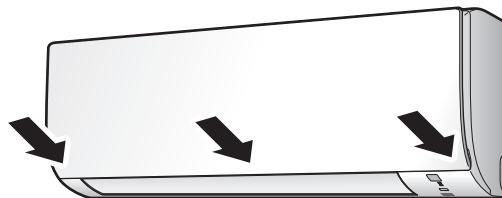

## 7.8 To take following items into account before a long idle period

- 1 Set the mode to **fan only** by pressing **FAN ONLY** button to dry the inside of the unit.
- 2 After operation stops, turn the breaker OFF.
- 3 Clean the air filters and replace them in their original positions.

### 4 Remove the batteries from the wireless remote control.



#### **INFORMATION**

It is recommended to have periodical maintenance performed by a specialist. For specialist maintenance, contact your dealer. Maintenance costs shall be borne by the customer.

In certain operating conditions the inside of the unit may get dirty after several seasons of use. This results in poor performance.

## 8 Troubleshooting

If one of the following malfunctions occurs, take the measures shown below and contact your dealer.



### WARNING

**Stop operation and shut OFF the power if anything unusual occurs (burning smells etc.).**

Leaving the unit running under such circumstances may cause breakage, electrical shock or fire. Contact your dealer.

The system **MUST** be repaired by a qualified service person.

| Malfunction   | Measure  |
|---|--|
| If a safety device such as a fuse, a breaker or an earth leakage breaker frequently actuates or the ON/OFF switch does NOT properly work. | Turn OFF the main power switch.                        |
| If water leaks from the unit.   | Stop the operation.                                    |
| The operation switch does NOT work well.  | Turn OFF the power supply.                             |
| If the user interface display indicates the unit number, the operation lamp flashes and the malfunction code appears.                     | Notify your installer and report the malfunction code. |

If the system does NOT operate properly except for the above mentioned cases and none of the above mentioned malfunctions is evident, investigate the system in accordance with the following procedures.

| Malfunction                            | Measure   |
|--|---|
| If the system does NOT operate at all. | <ul style="list-style-type: none"> <li>▪ Check if there is no power failure. Wait until power is restored. If a power failure occurs during operation, the system automatically restarts immediately after power is restored.</li> <li>▪ Check if no fuse has blown or breaker is activated. Change the fuse or reset the breaker if necessary.</li> <li>▪ Check the batteries of the wireless remote control.</li> </ul> |
| The system suddenly stops operating.   | <ul style="list-style-type: none"> <li>▪ Check if the air inlet or outlet of the outdoor or indoor unit is NOT blocked by obstacles. Remove any obstacles and make sure the air can flow freely.</li> <li>▪ The air conditioner may stop operating after sudden large voltage fluctuations to protect the system. It automatically resumes operation after about 3 minutes.</li> </ul>                                    |

| Malfunction   | Measure  |
|---|--|
| The system operates, but cooling or heating is insufficient.                                  | <ul style="list-style-type: none"> <li>▪ Check the airflow rate setting. Refer to <a href="#">"5.4 Airflow rate"</a> [▶ 19].</li> <li>▪ Check the temperature setting. Refer to <a href="#">"5.3.1 To start/stop operation mode and to set the temperature"</a> [▶ 18].</li> <li>▪ Check if the airflow direction setting is appropriate. Refer to <a href="#">"5.5 Airflow direction"</a> [▶ 19].</li> <li>▪ Check if the air inlet or outlet of the outdoor or indoor unit is NOT blocked by obstacles. Remove any obstacles and make sure the air can flow freely.</li> </ul> |
| The system operates, but cooling or heating is insufficient (air is NOT blown from the unit). | <ul style="list-style-type: none"> <li>▪ The air conditioner may be warming up for heating operation. Wait for 1 to 4 minutes.</li> <li>▪ The unit may be in defrost operation.</li> </ul>   |
| The system operates, but cooling or heating is insufficient (air is blown from the unit).     | <ul style="list-style-type: none"> <li>▪ Check if the air filters are clogged. Clean the air filters. See <a href="#">"7 Maintenance and service"</a> [▶ 30].</li> <li>▪ Check for open doors or windows. Close doors and windows to prevent wind from coming in.</li> <li>▪ Check if the unit operates in Econo operation. Refer to <a href="#">"5.8 Econo operation"</a> [▶ 22].</li> <li>▪ Check if there is any furniture directly under or next to the indoor unit. Move the furniture.</li> </ul>  |
| An abnormal function happens during operation.  | The air conditioner may malfunction because of lightning or radio waves. Turn the breaker OFF and back ON.   |
| The unit does NOT receive signals from the wireless remote control.                           | <ul style="list-style-type: none"> <li>▪ Check the batteries of the wireless remote control.</li> <li>▪ Make sure that the transmitter is NOT exposed to direct sunlight.</li> <li>▪ Check if there are any electronic starter type fluorescent lamps in the room. Contact your dealer.</li> </ul>   |
| The wireless remote control display is blank.   | Replace the batteries of the wireless remote control.  |
| An error code is displayed on the wireless remote control.                                    | Consult your local dealer. Refer to <a href="#">"8.2 Solving problems based on error codes"</a> [▶ 38] for a detailed list of error codes.   |
| Other electric appliances start to operate.   | If the wireless remote control signals operate other electric appliances, move the other appliances away, and contact your dealer.   |

After checking all the items above, if it is impossible to fix the problem yourself, contact your installer and state the symptoms, the complete model name of the unit (with manufacturing number if possible) and the installation date.

## 8.1 Symptoms that are NOT system malfunctions

The following symptoms are NOT system malfunctions:

### 8.1.1 Symptom: A sound like water flowing is heard

- This sound is caused by the refrigerant flowing in the unit.
- This sound may be generated when water is flowing away from the unit during cooling or drying operation.

### 8.1.2 Symptom: A blowing sound is heard

This sound is generated when the direction of the refrigerant flow is changed (e.g. when switching from cooling to heating).

### 8.1.3 Symptom: A ticking sound is heard

This sound is generated when the unit slightly expands or contracts with changes in temperature.

### 8.1.4 Symptom: A whistling sound is heard

This sound is generated by the refrigerant flowing during defrost operation.

### 8.1.5 Symptom: A clicking sound during operation or idle time is heard

This sound is generated when the refrigerant control valves or electrical parts operate.

### 8.1.6 Symptom: A clapping sound is heard

This sound is generated when an external device sucks air out of the room (e.g. exhaust fan, extractor hood) while the doors and windows in the room are closed. Open the doors or windows, or turn off the device.

### 8.1.7 Symptom: White mist comes out of a unit (Indoor unit)

- When humidity is high during cooling operation (in oily and dusty places). If the interior of an indoor unit is extremely contaminated, the temperature distribution inside a room becomes uneven. It is necessary to clean the interior of the indoor unit. Ask your dealer for details on cleaning the unit. This operation requires a qualified service person.
- When the air conditioner is changed over to heating operation after defrost operation. Moisture generated by defrost becomes steam and exits.

### 8.1.8 Symptom: The units can give off odours

The unit can absorb the smell of rooms, furniture, cigarettes, etc., and then emit it again.

## 8.1.9 Symptom: The outdoor fan rotates while the air conditioner is not in operation

- **After operation has stopped.** The outdoor fan continues to rotate for another 30 seconds for system protection.
- **While the air conditioner is not in operation.** When the outdoor temperature is very high, the outdoor fan starts to rotate for system protection.

## 8.2 Solving problems based on error codes

**Fault diagnosis by the wireless remote control**


If the unit runs into a problem, you can identify the fault by checking the error code by the wireless remote control. It is important to understand the problem and take measures before resetting the error code. This should be done by a licensed installer or your local dealer.

**INFORMATION**


See the service manual for:

- The complete list of error codes
- A more detailed troubleshooting guideline for each error

**To check the error code by the wireless remote control**


- 1 Aim the wireless remote control at the unit and press  for about 5 seconds.

**Result:**  blinks in the temperature setting display section.

- 2 Aim the wireless remote control at the unit and press  repeatedly until a continuous beep is heard.

**Result:** The code is now displayed on the display.

**INFORMATION**

- A short beep and 2 consecutive beeps indicate non-corresponding codes.
- To cancel the code display, hold  for 5 seconds. The code will also disappear from the display if the button is NOT pressed within 1 minute.

**System**

| Error code | Description   |
|------------|---|
| 00         | Normal  |
| U0         | Refrigerant shortage  |
| U2         | Overvoltage detection                                       |
| U4         | Signal transmission error (between indoor and outdoor unit) |
| UR         | Indoor/outdoor unit combination fault                       |

**Indoor unit**

| Error code | Description                                   |
|------------|---|
| R1         | Indoor unit PCB abnormality                   |
| R5         | Freeze-up protection or high-pressure control |
| R6         | Fan motor (DC motor) abnormality              |

| Error code | Description                                  |
|------------|--|
| E4         | Indoor heat exchanger thermistor abnormality |
| E9         | Room temperature thermistor abnormality      |

#### Outdoor unit

| Error code | Description                                   |
|------------|---|
| E8         | 4-way valve abnormality                       |
| E1         | Outdoor unit PCB abnormality                  |
| E5         | Overload activation (compressor overload)     |
| E6         | Compressor lock                               |
| E7         | DC fan lock                                   |
| E8         | Input power overcurrent                       |
| F3         | Discharge pipe temperature control            |
| F6         | High-pressure control (in cooling mode)       |
| H0         | Compressor system sensor abnormality          |
| H6         | Position sensor abnormality                   |
| H8         | DC voltage / current sensor abnormality       |
| H9         | Outdoor temperature thermistor abnormality    |
| J3         | Discharge pipe thermistor abnormality         |
| J6         | Outdoor heat exchanger thermistor abnormality |
| L3         | Electrical parts heat error                   |
| L4         | Radiation fin temperature rise                |
| L5         | Inverter instantaneous overcurrent (DC)       |
| P4         | Radiation fin thermistor abnormality          |
| F8         | Compressor internal temperature error         |

### 8.3 Troubleshooting for wireless LAN connection

The following table provides a brief description of how to deal with some problems. If none of the following solutions fix the problem, go to [app.daikineurope.com](http://app.daikineurope.com) for more information and FAQ.

| Problem  | Measure  |
|--|--|
| Connection to the wireless LAN is not possible (none of the LEDs on the indoor unit display are blinking). | <ul style="list-style-type: none"> <li>▪ Try operating the unit with the user interface.</li> <li>▪ Check if the power is on.</li> <li>▪ Turn the unit off and back on again.</li> </ul> |

| Problem  | Measure   |
|--|---|
| <p>The wireless LAN is NOT visible on the unit overview screen (Home screen) after configuration of the WLAN adapter (WPS option).</p> | <ul style="list-style-type: none"> <li>▪ Make sure the wireless LAN is close enough to the communication device.</li> <li>▪ Check if communication is OK.</li> <li>▪ Make sure that the smart device is connected to the same wireless network as the wireless LAN.</li> <li>▪ Try resetting to the factory default and repeat the setting. See "<a href="#">To reset the connection setting to the factory default</a>" [▶ 26].</li> </ul> |
| <p>The wireless LAN is NOT visible in the available Wi-Fi networks list on the smart device (Access point option).</p>                 | <ul style="list-style-type: none"> <li>▪ Try switching between access point and WPS setting to change the wireless channel. The wireless channel MUST be between 1~13.</li> <li>▪ Check if communication is OK.</li> <li>▪ Try resetting to the factory default and repeat the setting. See "<a href="#">To reset the connection setting to the factory default</a>" [▶ 26].</li> </ul>   |
| <p>Displayed indoor/outdoor temperature value in ONECTA differs from the value measured by other appliances.</p>                       | <ul style="list-style-type: none"> <li>▪ ONECTA displays indoor/outdoor temperature only for the indoor/outdoor unit's surrounding.</li> <li>▪ Measured temperature for other appliances may differ due to different condition around the unit (e.g. direct sunlight, frost accumulation...)</li> <li>▪ Temperature displayed in ONECTA is only referential.</li> </ul>   |



## 9 Disposal

**NOTICE**

Do NOT try to dismantle the system yourself: dismantling of the system, treatment of the refrigerant, oil and other parts **MUST** comply with applicable legislation. Units **MUST** be treated at a specialised treatment facility for reuse, recycling and recovery.

# 10 Glossary

**DHW = Domestic hot water**

Hot water used, in any type of building, for domestic purposes.

**Dealer**

Sales distributor for the product.

**Authorised installer**

Technical skilled person who is qualified to install the product.

**User**

Person who is owner of the product and/or operates the product.

**Applicable legislation**

All international, European, national and local directives, laws, regulations and/or codes that are relevant and applicable for a certain product or domain.

**Service company**

Qualified company which can perform or coordinate the required service to the product.

**Installation manual**

Instruction manual specified for a certain product or application, explaining how to install, configure and maintain it.

**Operation manual**

Instruction manual specified for a certain product or application, explaining how to operate it.

**Accessories**

Labels, manuals, information sheets and equipment that are delivered with the product and that need to be installed according to the instructions in the accompanying documentation.

**Optional equipment**

Equipment made or approved by Daikin that can be combined with the product according to the instructions in the accompanying documentation.

**Field supply**

Equipment NOT made by Daikin that can be combined with the product according to the instructions in the accompanying documentation.



ERC



**DAIKIN ISITMA VE SOĞUTMA SİSTEMLERİ SAN.TİC. A.Ş.**

Gülsuyu Mahallesi, Fevzi Çakmak Caddesi, Burçak Sokak, No:20, 34848 Maltepe  
İSTANBUL / TÜRKİYE  
Tel: 0216 453 27 00  
Faks: 0216 671 06 00  
Çağrı Merkezi: 444 999 0  
Web: www.daikin.com.tr

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium

Copyright 2024 Daikin

4D153789-5 2024.09